


# Model 990 Intelligent Integrated Instrument System

## QUICK SETUP INSTALLATION

- 1 Connect input or output into the desired instrument port as shown.
- 2 Insert power plug into PWR jack as shown.
- 3 Plug the D9 part of a (C75100AA) RS-232 cable into a computer serial port. Insert the plug on the other end of the cable into the 990 SIO IN jack as shown.
- 4 If your unit is installed with the RS-485 option then use a (C75103ZZ) cable to connect the red wire to signal A and the white wire to signal B, then insert the cable plug into the 990 LAN IN jack as shown.
- 5 If your unit is installed with the WAN modem option then install the (C75106AG) cable (RJ-11) into the corresponding jack and the other end of the cable into a standard telephone jack as shown.
- 6 If your unit is installed with the DA15 connector interface then plug power into the 990 PWR jack as shown.

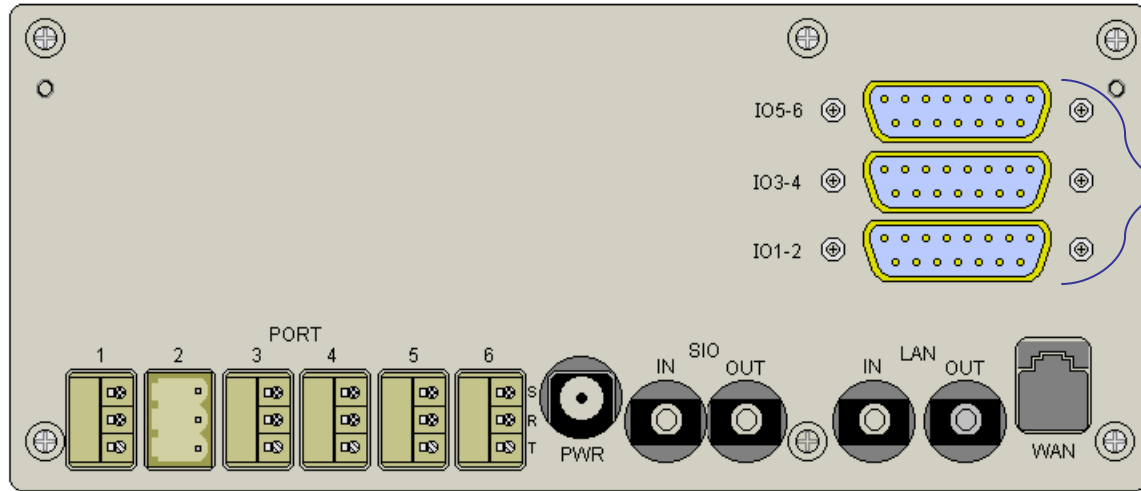

DA15 Interface

6	Si
2	Ri
9	Ro
13	+15V Pwr
14	-15V Pwr
3	To
12	Com Pwr
8	So
1	Ti

